


# TELEFUNKEN

## 32XT500i 32" FHD LCD TV

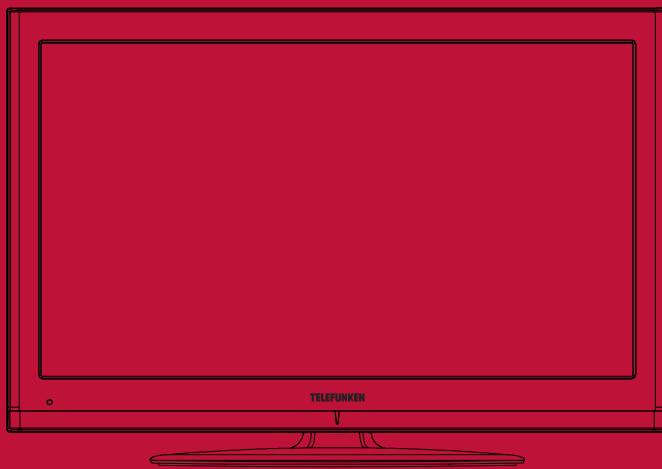

### KULLANIM KILAVUZU USER'S GUIDE















## **ÖNEMLİ UYARILAR**

### **1. Üreticinin saklı bulundurduğu haklar:**

Üretici firma, ürününde ya da ürünün kullanım kılavuzunda belirtilen özellikleri, teknolojideki ilerlemenin gereği olarak, herhangi bir bilgilendirme yapmadan değiştirme hakkını saklı tutar.

### **2. Ekran Teknolojisi ile İlgili Uyarılar:**

TFT ve Plazma teknolojisi gereği, ekranda aktif olmayan ya da sürekli parlayan beyaz, kırmızı ya da mavi noktacıklar (pixeller) bulunabilir. Bu ürünün performansını etkilemez, bu bir ariza değildir. Bununla ilgili detaylar kullanım kılavuzunun ilgili sayfalarında belirtilmiştir. Kriterler dahilindeki durumlarda üretici firma herhangi bir sorumluluk taşımaz.

### **3. Ekranda sürekli sabit görüntünün kalması:**

TFT ve Plazma teknolojisi gereği, ekranda sürekli sabit görüntünün kalması, sürekli aynı arka planın ekranda gösterilmesi ya da 16:9 bir televizyonda, uzun süre 4:3 görüntü izlenmesi sonrası, ekranda "yanma" etkisi meydana gelebilir. Bu etkinin oluşmaması için aşağıdakilere uymanız önemle tavsiye edilir.

- Sürekli sabit görüntü izlemeyiniz.
- 16:9 formattaki televizyonunuzda 4:3 formatta görüntü izlemeyiniz.
- Kontrast ve parlaklıği en düşük seviyede kullanmaya çalışınız.

### **4. Full HD ürünlerde;**

TV yayını yada diğer kaynaklardan verilen yüksek çözünürlük desteği olmayan uyu alıcısı, DVD player ya da kablolu kanal yayınılarında beklenen performans alınamayabilir ve bu yayınınlarda resimde mozaiklenme veya resim netlik ve keskinliği az, görüntüde ekranda bazı efektler oluşabilir. Bu bir ariza değildir. Yüksek çözünürlüğü (1920x1080) destekleyen TV'nizin iyi bir performans ile çalışabilmesi için Full HD teknolojisi gereği, yüksek çözünürlüklü yayın (HD yayın) ile izlenilmesi tavsiye edilir. TV yayını yada diğer kaynaklardan verilen yüksek çözünürlük desteği olmayan uyu alıcısı, DVD player ya da kablolu kanal yayınılarında beklenen performans alınamayabilir ve bu yayınınlarda resimde mozaiklenme veya resim netlik ve keskinliği az, görüntüde ekranda bazı efektler oluşabilir. Bu bir ariza değildir. Eğer ürününüz yüksek çözünürlüğü destekleyen bir ürün ise, iyi bir görüntü performansı alabilmeniz için; yüksek çözünürlük (HD) teknolojisi gereği; yüksek çözünürlüklü yayın kaynağını kullanmanız tavsiye edilir.

### **5. Cihazın çalışma sesi hakkında:**

Cihazınızdaki elektronik devrelerde, teknolojisi gereği; çalışma ya da standby durumunda, üzerinden geçen akıma bağlı olarak bir çalışma sesi oluşabilmektedir. Oluşan bu ses, standartlar dahilinde olsa dahi, insan kulüğünün hassasiyetine ve izleme mesafesine göre bazen duyulabilir. Duyulan bu ses, cihazınızın performansını etkilemez ve bu bir ariza değildir.

### **6. Cihazınızın paneline (ekranına) dışarıdan hiçbir şekilde mekanik bir darbe uygulanmamasına dikkat ediniz:**

TFT-LCD televizyonların panelleri (ekranlar) yekpare bir cam parçası değildir ve katmanlardan oluşmaktadır. Cihazınız, dışarıdan uygulanan bir darbe sonucu ön kısmın panelden (ekrandan) darbe alırsa, ekranın dış dünyaya en yakın katmanında kırılma/çatlama olmadan içerisindeki katman kırılabilir/çatlayabilir ve bu durumun yetkili servis tarafından teknik olarak tespiti mümkün değildir. Bu nedenle, cihazınızın paneline (ekranına) dışarıdan hiçbir şekilde mekanik bir darbe uygulanmamasına dikkat ediniz. Aksi halde, "dış kaynaklı bir darbe sonucu meydana gelen" bir hasar, kullanım hatası sayılacağından, üretici firmانın hukuken hiçbir sorumluluğu olmayacağından.

### **7. Cihaz kullanımı hakkında:**

Aldığınız cihaz, ev tipi kullanım için üretilmiş olup, sadece evde ve belirtilen amaçlar için kullanılabilir. Ticari ya da toplu kullanıma uygun değildir. Tüketicinin buna aykırı kullanımında, TKHK hükümlerinde belirlenmiş, ücretsiz onarım ve garanti süresi içinde arızalarдан üretici ve satıcının mesuliyetinin kalktığını önemle belirtiriz.



## Specifications

**RF AERIAL INPUT** 75 Ohm (unbalanced)

**OPERATING VOLTAGE** 220-240V AC, 50 Hz.

**AUDIO OUTPUT POWER (W<sub>RMS</sub>) (10% THD)**: 2 x 6

**POWER CONSUMPTION (W)**: 150 W (max) < 1 W  
(Standby)

### PANEL

16:9 display, 32" Screen Size


DxLxH (With foot): 212 x 788 x 567 Weight (Kg): 11,60

DxLxH (Without foot): 94 x 788 x 518,5 Weight (Kg): 10,90


**Transmission Standards:** VHF (BAND I/III) UHF (BAND U) HYPERBAND

## Step 1 - Installing the Batteries to the Remote

1. Lift the cover on the back of the remote upward as shown in the figure to the right.
2. Install two AAA batteries. Make sure to match the + and - ends of the batteries to the diagram in the battery compartment.
3. Replace the cover.

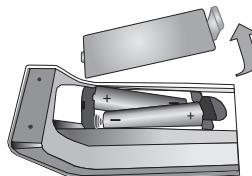

## Step 2 - Control Touch Buttons

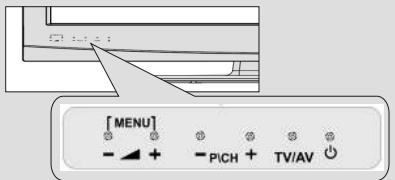


You can adjust the volume or change channels using + and - buttons on your TV.

Use **TV/AV** button to change sources.

Press + and - buttons at the same time to view the main menu.

## Step 3 - Connecting External Devices

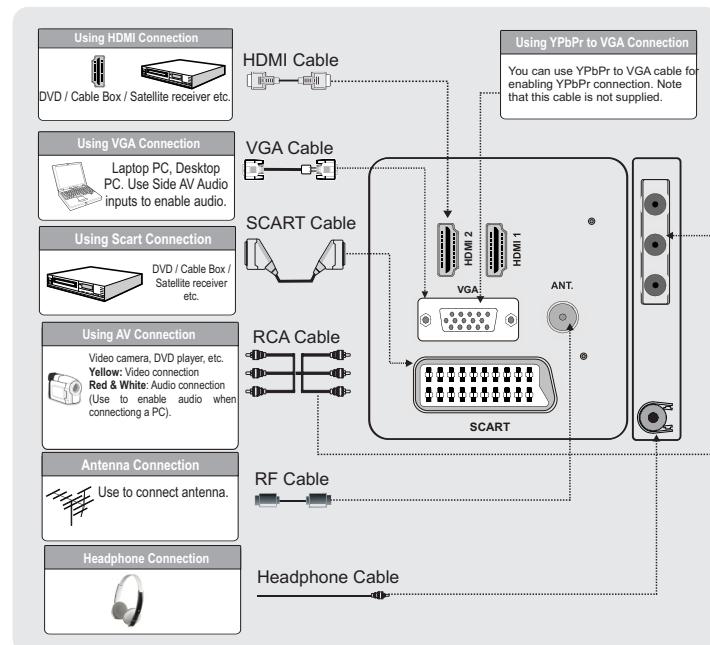

*Note: It is recommended that the output resolution of a connected device via the HDMI input should be set to AUTO (or original). If the connected device does not include AUTO (or original) resolution, selecting 576i for non-HD content is recommended. If the connected device does not include AUTO (or original); or 576i options, watching non-HD content via the Scart or Side AV connectors is recommended.*

## Supported PC Input Typical Display Modes

The display has a maximum resolution of 1920 X 1080. Your TV may not support different resolutions. If you switch your PC to an unsupported mode, a warning OSD will appear on the screen.





<b>HDMI True Black</b>	While watching from HDMI source, this feature will be visible in the Advanced Settings menu. You can use this feature to enhance blackness in the picture. You can set this feature as "On" for activating HDMI True Black mode
<b>Sound Menu</b>	
<b>Volume</b>	Adjusts volume level.
<b>Equalizer</b>	In equalizer menu, the preset can be changed to <b>Music</b> , <b>Movie</b> , <b>Speech</b> , <b>Flat</b> and <b>User</b> . Press the <b>MENU</b> button to return to the previous menu. <i>Equalizer menu settings can be changed manually only when the Equalizer Mode is in User.</i>
<b>Balance</b>	This setting is used for emphasizing left or right speaker balance.
<b>Sound Mode</b>	You can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.
<b>AVL</b>	Automatic Volume Limiting (AVL) function sets the sound to obtain fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes).
<b>Reset</b>	Resets the picture settings to factory default settings.
<b>Feature Menu</b>	
<b>Sleep Timer</b>	Sets sleep timer. The timer can be programmed between Off and 2 hours (120 minutes) in steps of 10 minutes. If <b>Sleep Timer</b> is activated, at the end of the selected time, the TV goes automatically to standby mode.
<b>Child Lock</b>	Enables or disables child lock. When On is selected, the TV can only be controlled by the remote control. In this case the control panel buttons will not work, except for the Standby/On button. When Child Lock is activated you are able to switch the TV to Standby mode with the Standby/ On button. To switch the TV on again, you need the remote control. Hence, if one of those buttons is pressed, <b>Child Lock Is On</b> will be displayed on the screen when the menu screen is not visible.
<b>Language</b>	Sets the language.
<b>Default Zoom (Optional)</b>	While zoom mode is set as AUTO, the TV will set the zoom mode in accordance with the signal of the broadcast. If there is no WSS or aspect ratio information, the TV will then use this setting to adopt. Press "▼" or "▲" button to select <b>Default Zoom</b> . You can set <b>Default Zoom</b> to <b>16:9</b> or <b>4:3</b> pressing "◀" or "▶" button.
<b>Blue Background</b>	Activates or deactivates blue background system when the signal is weak or absent.
<b>Menu Timeout</b>	Changes timeout duration for menu screens.
<b>TXT Language</b>	Sets the teletext language.
<b>EXT Out</b>	Enables or disables EXT Out. For copying from a DVD or VCR device, you should choose desired source from source menu and turn "On" to EXT Out from feature menu. Ext Out should be On in order to use Timers function in the DTV mode.
<b>Auto TV Off</b>	You can set the timeout value of auto off feature. After the timeout value is reached and the Tv is not operated for selected time , the TV will go off.
<b>Store Mode</b>	If you set store mode to "ON", your TV's features will be illustrated on the top of the screen. To deactivate this feature, please set to "OFF".
<b>Backlight (optional)</b>	Sets <b>Backlight</b> to <b>Auto</b> , <b>Medium</b> , <b>Maximum</b> or <b>Minimum</b> .
<b>Power Save Mode (optional)</b>	Sets Power Save Mode as On or Off. If you set Power Save Mode as On, the TV will switch to energy-saving mode and luminance level of TV set will be decreased to optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

### Source Menu

Once you have connected optional equipment systems to your TV, you should select the required input to view pictures from that source. In source menu, highlight a source by pressing “▼” or “▲” button and switch to that mode by pressing “OK” button. With the “◀” or “▶” buttons you can set Off or On. When Off is selected; this source does not appear in the OSD when you press the “SOURCE” button of the remote control.

*Note: YPbPr mode can be used only when you connect a device that has a YPbPr output through the PC-VGA input with YPbPr to PC cable (YPbPr cable is not supplied).*

### Install Menu

Program	Use “◀” or “▶” button to select the program number. You can also enter a number using the numeric buttons on the remote control. There are 200 programme storage between 0 and 199.
Band	Band can be selected either C or S
Channel	Channel can be changed by “◀” or “▶” button or numeric buttons.
Colour System	Use “◀” or “▶” button to change the colour system to AUTO, PAL or SECAM.
Sound System	Press “◀” or “▶” button to change the sound system to BG, DK, I, L or L'.
Fine Tune	You can use this setting for fine tuning channels.
Search	Use “◀” or “▶” button to start programme searching. You can also enter the desired frequency using the numeric buttons while Search item is highlighted.
Store	Press “▶” or OK button to store the settings. “Stored...” will be displayed on the screen.

### Program Table Menu

Using the program table and by moving the cursor in four directions you can reach 20 programmes in the same page. You can scroll the pages up or down by pressing the navigation buttons to see all the programmes in TV mode (except for the AV modes). By cursor action, programme selection is done automatically.

Name	To change the name of a programme, select the programme and press the <b>RED</b> button. The first letter of the selected name will be highlighted. Press “▼” or “▲” button or numeric buttons to change that letter and “◀” or “▶” button to select the other letters. By pressing the <b>RED</b> button, you can store the name.
Delete	To delete a programme, press the <b>YELLOW</b> button. Pressing the <b>YELLOW</b> button again erases the selected programme from the programme list, and the following programmes shift one line up.
Move	Select the programme which you want to move by using the navigation buttons. Press the <b>GREEN</b> button. By using the navigation buttons move the selected programme to the decided programme space and press the <b>GREEN</b> button again.
APS	Deletes all stored channels and settings, resets TV to factory settings and starts first time installation. See the First Time Installation section for more information on this process.

### PC Position Menu

Autoposition (in PC mode)	Automatically optimizes the display. Press <b>OK</b> to optimize.
H Position (in PC mode)	This item shifts the image horizontally to right hand side or left hand side of the screen.
V Position (in PC mode)	This item shifts the image vertically towards the top or bottom of the screen.


Phase (in PC mode)	Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by trial and error method.
Dot Clock (in PC mode)	Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.

Dear Customer;

This appliance is manufactured with TFT LCD Display technology.

An image is created with colour light points called pixels in TFT-LCD appliances.

Each pixel consists of 3 sub-pixels [fixed colour (red, green, blue) light points].

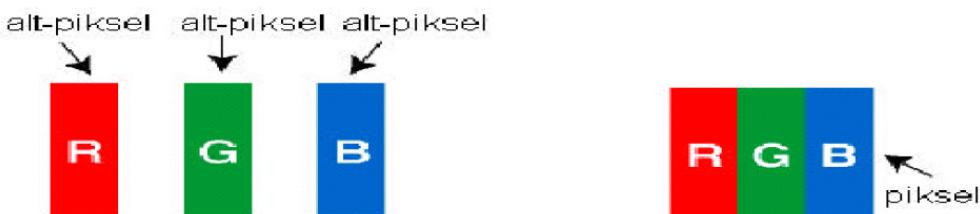

As a requirement of production technologies, the abovementioned sub-pixels may cause "sub-pixel errors" by way of lighting continuously or remaining dim continuously.

Please consider the following explanation about a possible sub-pixel error.

This problem can be encountered during the production phase as well as during use.

### **Sub-pixel errors are mainly 2 types.**

Type 1 : The sub-pixel lighting continuously (may be red, green or blue)

Type 2 : The sub-pixel which is continuously dim (seems black)

The sub-pixel errors determined according to the ISO 13406-2 standard are given in the following table.

Type	Explanation	Quantity	Note
Type 1	Random (at 5 mm or higher intervals)	2	Within the compass of the criterion, not intervened
	Adjacent 2 pixels	1	Within the compass of the criterion, not intervened
	Adjacent 3 or more pixels		Off-criterion
Type 2	Random (at 5 mm or higher intervals)	7	Within the compass of the criterion, not intervened
	Adjacent 2 pixels	2	Within the compass of the criterion, not intervened
	Adjacent 3 or more pixels		Off-criterion
<b>Type 1 and Type 2 Total</b>		7	Within the compass of the criterion, not intervened

## **IMPORTANT WARNINGS**

### **1. Rights reserved by the manufacturer:**

The manufacturer reserves the right to change the features stated in the product or in the user's manual of the product without giving any information, when required by the improvements in technology.

### **2. Warnings about Screen Technology:**

Due to TFT and Plasma technologies, there may be inactive or continuously shining white, red or blue pixels in the screen. This does not affect the performance of the product, and it is not a failure. The related details are given in the related pages of the user's manual. The manufacturer does not have any responsibility in the cases within the compass of the criteria.

### **3. A continuous fixed image on the screen:**

Due to TFT and Plasma technologies, "burning" effect may arise in the screen after a continuous fixed image on the screen, displaying the same background continuously or watching a 4:3 video on a 16:9 television for a long time. In order to avoid this effect, it is highly recommended that you follow the followings.

- Do not watch a fixed image continuously.
- Do not watch videos in the format of 4:3 in your television which supports the format of 16:9.
- Try to use contrast and brightness at a minimum level.

### **4. In Full HD products;**

The expected performance may not be achieved in TV broadcasts and the broadcasts of satellite receivers which are not supported by other sources in terms of high definition, DVD players or cable television; and in these broadcasts, mosaic images may occur, sharpness and resolution of the image may be low; some effects may arise on the screen. This is not a failure. It is advisable to watch high definition broadcasts for your TV which supports high definition (1920x1080) to work with a high performance as a requirement of the Full HD technology. The expected performance may not be achieved in TV broadcasts and the broadcasts of satellite receivers which are not supported by other sources in terms of high definition, DVD players or cable television; and in these broadcasts, mosaic images may occur, sharpness and resolution of the image may be low; some effects may arise on the screen. This is not a failure. If your appliance supports high definition, it is recommended that you use high definition broadcast sources in order to achieve a high screen performance as a requirement of the high definition (HD) technology.

### **5. About Working Sound of the Appliance:**

A working sound may be generated in the electronic circuits in your appliance as a requirement of its technology depending on the current on it while running or in standby status. This sound can sometimes be heard depending on the sensitivity of human ear and watching distance although it is within the compass of the standards. This sound does not affect the performance of your appliance and it is not a failure.

### **6. Make sure that the panel (screen) of your appliance is never subjected to any external mechanical impact:**

The panels (screens) of the TFT-LCS televisions are not only a piece of glass; on the contrary they are composed of layers. If your appliance is damaged in its panel (screen) which is the front part by an external impact, the inner layer of the screen might be broken / cracked even when no break/crack arises in the layer of the screen which is the closest to the outer environment. This can be technically detected by the authorized service. Therefore, make sure that the panel (screen) of your appliance is never subjected to any external mechanical impact. Otherwise, as any damage "caused by an external hit" is considered as a usage error, the manufacturer will not have any legal responsibility.

### **7. About the use of the appliance:**

The appliance you purchased was produced for home-type use, and it can be used only at home and for the specified purposes, not for commercial or collective use. Otherwise, the manufacturer and the dealer will not be responsible for the failures within the period of warranty and free repair, which is determined in the provisions of the Act on the Protection of Consumers.

**Üretici firma: Vestel Elektronik Sanayi ve Ticaret A.Ş.  
Adres: Organize Sanayi Bölgesi 45030 Manisa  
Tel: 0236 233 01 31  
Fax: 0236 233 25 85**

[www.telefunken.com.tr](http://www.telefunken.com.tr) 444 4 987



Cihazınızın Gümrük ve Ticaret Bakanlığı veya Bakanlıkça tespit ve ilan edilen kullanım ömrü (cihazın fonksiyonlarını yerine getirebilmesi için gerekli yedek parça bulunurma süresi) 10 yıldır.

**TELEFUNKEN®**